Warranty
This warranty remains in effect for five years from date of purchase for speaker components, one year on subwoofer amplifiers and electronics components.
Persons Protected. This warranty will only be enforceable by the original owner during the warranty period so long as proof of date of purchase from an authorized dealer is presented whenever warranty service is required.
What is covered. Except as otherwise specified below this warranty covers all defects in materials and workmanship in this product. The following are not covered: damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product; damage occurring during shipment (claims must be presented to the carrier); any product purchased outside USA or Canada, or on which the serial number has been defaced, modified or removed.
How You Can Get Service.
U.S. Purchasers. Please contact us at 1-800-225-9847 or write to: AR (attention: Customer Service Department) 17C Airport Drive Hopedale, MA 01747 We will either inform you of the name and address of an authorized repair station which will service the product or will advise you to send the product to a factory service center.
Canadian Purchasers. The product should be returned to the dealer from whom it was purchased and such dealer either will service or arrange for service of the product. If shipment of the product is required, it should be packaged properly. The original dated bill of sales must always be included with the product as proof of warranty coverage.
What We Will Pay For. We will pay for all labor and material expenses required to repair the product but you must pay any labor cost for the removal and/or installation of the product. If the product is shipped for warranty service, you must prepay the initial shipping charges, but Audiovox Electronics Corporation will pay the return shipping charges if the product is returned to an address inside the USA or Canada.
Limitation of Implied or Statuatory Warranties and Conditions.
Exclusions. Audiovox Electronics Corporation's liability is limited to the repair or replacement, at our option, of any defective product and shall not include special, indirect, incidental or consequential damages of any kind. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY IN CONTRACT OR TORT, WHETHER OR NOT ARISING FROM THE COMPANY'S NEGLIGIENCE, ACTUAL OR IMPUTED. NO PERSON OR REPRESENTATIVE IS AUTHORIZED TO ASSUME FOR THE COMPANY ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Cette garantie demeure en effet pendant cinq années de date d'achat pour des composants de haut-parleur, d'un an sur des amplificateurs de subwoofer et de composants électroniques.
Personnes protégées. Cette garantie sera applicable uniquement par le propriétaire d'origine au cours de la période de garantie aussi longtemps que la preuve de la date d'achat chez un concessionnaire agréé est présentée chaque fois qu'un service de garantie est exigé.
Ce qui est couvert par la garantie. Sauf comme autrement spécifié ci-dessous, cette garantie couvre tous les défauts des matiéres et de fabrication existant dans ce produit. Ce qui suit n'est pas couvert: les dommages provenant d'un accident, d'un mauvais emploi, d'un emploi abusif, de la négligence, de la modification de produit, d'une installation incorrecte, d'une tension de secteur incorrecte, d'une réparation non autorisée ou d'un manquement á suivre les instructions fournies avec le produit, les dommages se produisant au cours de l'expédition (les réclamations doivent être présentées au transporteur), tout produit acheté á l'extérieur ces États-Unis ou du Canada, ou sur lequel le numéro de série a été défiguré, modifié cu enlevé.
Comment vous pouvez obtenir du service.
Acheteurs des États-Unis. Veuillez nous contacter au 1-800-225-9847 ou écrevez á: AR (Á l'attention du Département du Service Client) 17C Airport Drive Hopedale, MA 01747. Nous vous informerons du norm et de l'adresse d'une station-service autoriséequi effectuera le service du produit ou nous vous conseillerons d'envoyer le produit á un centre de srevices en usine.
Acheteurs canadiens. Le produit doit être retourné au concessionnaire chez qui il á été acheté et ce concessionnaire effectuera le service ou bien prendra des mesures pour faire effectuer le service du produit. Si l'expédition de produit est exigée, ce dernier coit être emballé correctement. L'acte de vente daté d'origine doit toujours être inclus avec le produit comme preuve que ce dernier est couvert par la garantie.
Ce que nous paierons. Nous paierons toutes les dépenses de main-d'oeuvre et de matériaux requises pour réparer le produit, mais vous devrez payer tous frais de main-d'oeuvre encourus pour l'enlévement et/ou l'installation du produit. si le produit est expédié pour le service de garantie, vous devrez payer d'avance les frais initiaux d'expédition, mais Audiovox Electronics corporation paiera les frais d'expédition de retour si le produit est retoumé á une adresse á l'intérieur des États-Unis ou du Canada.
Limitation des garanties implicites ou établies par la loi et conditions.
Exclusions. La responsabilité de Audiovox Electronics Corporation est limitée á la réparation ou au remplacement, á notre option, de tout produit défectueux et n'inclura pas les dommages spéciaux, indirects, accidentels ou consécutifs de n'importe quelle sorte. CETTE GARANTIE EST EXCLUSIVE ET REMPLACE N'IMPORTE QUELLE AUTRE GARANTIE, EXPRESSE OU IMPLICITE Y COMPRIS SANS S'Y LIMITER LES GARANTIES IMPLICITES DE QUALITÉ VENDABLE OU DE COMPATIBILITÉ POUR UNE UTILISATIONPARTICULIÉRE ET TOUTE OBLIGATION, RESPONSABILITÉ, TOUT DROIT, TOUTE RÉCLAMATION OU TOUT DÉDOMMAGEMENT POUR RAISON DE CONTRAT OU D'ACTE PRÉJUDICIABLE, QU'ILS OU QU'ELLES PROVIENNENT OU NON DE LA NÉGLIGENCE DE LA SOCIéTÉ, RÉELLE OU IMPUTÉ. AUCUNE PERSONNE NI AUCIUN REPRÉSENTANT N'EST AUTORISÉ Á ASSUMER POUR LA SOCIÉTÉ N'IMPORTE QUELLE AUTRE RESPONSABILITÉ AU SUJET DE LA VENTE DE CE PRODUIT. EN AUCUN CAS, LA SOCIÉTÉ NE SERA TENUE RESPONSABLE DE DOMMAGES INDIRECTS, ACCIDENTELS OU CONSÉCUTIFS.

Sigue habiendo esta garnatia en efecto por cinco años de la fecha de la compra para los componentes del altavoz, de un aNno en los ampificadores del subwoofer y de componentes electrónicos.
Personas a quienes cubre. Esta garantia será ejecutoria solament por el propietario original durante el periodo de vigencia ce la misma, siempre y cuando éste presente prueba de la fecha de compra en un distribuidor autorizado, cuando se requiera el servicio de garantia.
Lo que está cubierto. Con la excepción de lo que se especifica de lo contrario a continuación esta garantia cubre lodos defectos de material y manos de obra en este producto. Los siguientes no están cubiertos: daños que resultan de accidentes, uso napropiado, abuso, negligencia, modificacioón de producto, instalación inapropiada, voltaje de linea incorrecta, reparación no autorizada por el no seguir las instrucciones que se proporcionan con el producto; daños que ocurren durante el envio (las reclamaciones deben ser presentadas al transportador); cualquier producto comprado afuera de los Estados Unidos o Canadá, o sobre el cual el número de serie hasido desfigurado, modificado o retirado.
Como Usted Puede Obtener Servicio
Compradores en los Estados Unidos. Por favor póngase en contacto llamando al 1-800-225-9847 o escribanos a : AR (Atención de: Departamento de Atención al Cliente) 17C Airport Drive Hopedale, MA 01747. Nosotros le informaremos a usted acerca del nombre y la dirección de una estación de reparación autorizada que proporcionará servicio al producto o le aconsejaremos a usted que envie el producto a un centro de servicio de fábrica.
Compradores Canadienses. El producto deberia ser devuelto al negociante del que fue comprado y cada negiciante proporconará servicio o hará los arreglos para que se incluido con el producto como prueba de la cobertura de garantia
Lo Que Nosotros Pageremos. Nosotros pagaremos todos los gastos de mano de obra y material que se requieren para reparar el producto, pero usted debe pagar cualquier coste de mano de obra para el retiro y/o instalación del producto. Si el producto es enviado para servicio de garantia, usted debe pagar por anticipado los cargos de envio iniciales, pero la Audiovox Electronis Coproration pagará los cargos de envio de regreso si el producto es devuelto a una dirección dentro de los Estados Unidos o Canadá.
Limitación de Garantias y Condiciones Implicitas o Establecidas por la Ley.
Exclusiones. La responsabilidad de Audiovox Electronics Corporation se limita a la reparación o el reemplazo, a nuestra opción, de cualquier producto defectuoso y no incluirá daños especiales, indirectos, incedentales o consecuentes dé ringún tipo. ESTA GARANTÍA ES EXCLUSIVA Y TOMA EL LUGAR DE CUALQUIERA Y TODAS LAS OTRAS GARANTÍAS, EXPRESADAS O IMPLÍCITAS, INCLUYENDO SIN LIMITACIÓN LAS GARANTÍAS IMPLÍCITAS DE COMERCIABILIDAD E IDONEIDAD PARA UN PROPÓSITO EN PARTICULAR CUALQUIER OBLIGACIÓN, RESPONSIBILIDAD, DERECHO, RECLAMACIÓN O REMEDIO EN CONTRATO O AGRAVIO, QUE SURJA O NO DE LA NEGLENCIA, EFECTIVA O IMPUTADA, DE LA COMPAÑIA. NINGUNA PERSONA O REPRESENTANTE ESTÁ AUTORIZADO PARA ASUMIR PARA LA COMPAÑIA NINGUNA OTRA RESPONSABILIDAD EN CONEXIÓN CON LA VENTA DE ESTE PRODUCTO. LA COMPAÑIA NO SERÁ RESPONSABLE EN NINGÚN CASO POR DAÑOS INDIRECTOS, INCIDENTALES O CONSECUENTES.

Audiovox Electronics Corporation
150 Marcus Blvd
Hauppauge, New York 11788
©2005 Audiovox Electronics Corporation
AR is a registered trademark of Audiovox Electronics Corporation.
PRINTED IN CHINA

098-27076

INTRODUCTION
Check your system carefully. If it has been damaged in transit, report the damage immediately by calling your AR dealer. Observe all warnings and cautions.

WARNING
To prevent fire or shock hazard, DO NOT EXPOSE this System to rain or excessive moisture.

We recommend that you not operate your speakers with the bass, treble and loudness controls set to full boost. This will place undue strain on the electronics and speakers and could damage them.

The volume control setting on your Receiver is not a specific indication of the overall loudness level of the speakers. The only important consideration is the loudness level at which the system can be played, regardless of where the volume control is set.

Whenever changing cables, pulling plugs, etc., ALWAYS TURN OFF ALL EQUIPMENT. This prevents transients from entering the speakers and prevents electrical energy from reaching you. Keep all connections out of the reach of children.

ATTENTION !
Veuillez lire complètement ces instructions avant d'essayer de fairefonctionner votre Enceinte d'Ambiance Advent. Assurez-vous de conserver ce manuel comme référence pour l'avenir. Conservezaussi votre facture de vente, car elle peut être exigée pour le service de garantie.

AVERTISSEMENT
Pour prévenir le risque d'incendie ou de choc, N'EXPOSEZ P AS ceSystème de Théâtre maison à la pluie ou à une humidité excessive.

Nous vous recommandons de ne pas faire fonctionner vos haut-parleurs avec les commandes des graves, des aigus et de correctionphysiologique placées sur l'amplification maximale. Cela mettraitdes efforts injustifiables sur l'électronique et les haut-parleurs, etcela pourrait les endommager.

Le réglage de la commande de volume sur votre récepteur ne donnepas une indication spécifique du niveau d'écoute global des haut-parleurs. La seule chose importante à considérer est le niveaud'écoute auquel il est possible de faire fonctionner le système, sanstenir compte de la position de réglage de la commande de volume.

Chaque fois que vous changez des câbles, tirez des fiches, etc.,METTEZ TOUJOURS TOUT L'ÉQUIPEMENT À L'ARRÊT. Celaempêche les transitoires d'entrer dans les haut-parleurs etempêche l'énergie électrique de vous atteindre. Gardez toutes lesconnexions hors de la portée des enfants..

INTRODUCCIÓN
Controle su sistema cuidadosamente. Si ha sido dañado en tránsito, informe los daños en forma inmediata a su concesionarioAdvent mediante un llamado telefónico. Respete todas las advertenciasy medidas de precaución.

ADVERTENCIA
Para prevenir el peligro de incendio o descargas eléctricas, NOEXPONGA este Sistema de Cine Doméstico a la lluvia o humedadexcesiva.

Es aconsejable no operar los altavoces con los controles de bajos,agudos y sonoridad al nivel máximo de amplificación. Si lo hacesometerá a los componentes electrónicos y a los altavoces a unexceso de tensión y podría dañarlos.

La configuración del control de volumen de su Receptor no constituye una indicación específica del nivel de sonoridad total delos altavoces. Lo único que se debe tener en cuenta es el nivel desonoridad al que puede escucharse el sistema, independiente-mente de la configuración de control de volumen preestablecida.

Cuando deba cambiar o desenchufar cables, etc. APAGUE TODO ELEQUIPO. De esta forma se evita el ingreso de sobretensión a losaltavoces y el riesgo de descargas eléctricas. Mantenga todas lasconexiones fuera del alcance de los niños.

AR Acoustic Research®

PL900

SUBWOOFER

CAUTION

RISK OF ELECTRICAL SHOCK DO NOT OPEN

WARNING: SHOCK HAZARD - DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.

L'éclair avec le symbole de flèche, à l'intérieur d'un triangle équilatéral, est destiné à avertir l'utilisateur de la présence d'une "tension dangereuse" non isolée à l'intérieur de l'enceinte, qui peut avoir une grandeur suffisante pour constituer un risque de choc électrique pour des personnes.

La luz intermitente con la punta de una flecha dentro de un triángulo equilátero se utiliza para alertar al usuario sobre la presencia de "voltaje peligroso" sin aislación dentro del gabinete del producto, que puede ser de magnitud suficiente como para exponer a las personas a un riesgo de descarga eléctrica.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Le point d'exclamation à l'intérieur d'un triangle équilatéral est destiné à avertir l'utilisateur de la présence d'instructions importantes de fonctionnement et d'entretien (maintenance) dans la documentation accompagnant le produit.

El signo de exclamación dentro de un triángulo equilátero sirve para alertar al usuario acerca de la existencia de instrucciones de operación y mantenimiento (reparaciones) en el material impreso que acompaña al producto.

Your AR Subwoofer delivers powerful, deep bass sound output for a natural, life-like sonic experience. Please follow the directions in this manual to achieve the best performance from your system.
The hook-up and operation of the Subwoofer is the same for both a Home Theater surround sound system or a stereo music system. The Subwoofer has its own built-in amplifier, so it works with any sound system. The Subwoofer's own crossover network sends bass-only signals to the Subwoofer's built-in amplifier. This lets the Subwoofer add extra bass to the out put from your other speakers.
For simplicity, we call your Home Theater system's or music system's main speakers the Front speakers. We call your AV receiver, stereo receiver, or integrated amplifier the Receiver.

Placement

Your AR Subwoofer must sit on the floor, preferably in a corner, to work properly. The floor and corner are actually a part of the Subwoofer's design. Place your Subwoofer in the corner nearest your system's electronic components to keep wire or cable runs short.

Controls & Connections

POWER CORD: Plug the power cord into an AC wall outlet or other AC outlet capable of supplying at least 200 Watts.

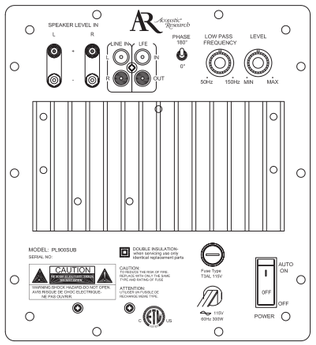

POWER SWITCH: Turns the AC supply completely OFF,ON or sets the Subwoofer to AUTO ON operation. In AUTO ON, the Subwoofer is in standby mode until it detects an audio signal input, then the Subwoofer turns on automatically. A few minutes after audio input signals cease, the Subwoofer automatically returns to standby mode.

POWER INDICATOR LED: This is inside the front AR logo.

FUSE 250V 3A: This fuse protects against internal and external faults. If the POWER switch is ON and the power indicator LED is unlit, unplug the power cord from the AC outlet and check the fuse by unscrewing the center piece from the holder. **IMPORTANT-** If the fuse is blown, replace it only with a fuse of the same type and current rating.

L, R SPEAKER-IN TERMINALS: See Connection Option 1. These terminals are for making connections using speaker wire. If you use this option, do not use Option 2.

LFE INPUT JACK: Allows direct connection from the receiver with an internal low pass filter. This connection bypasses the subwoofer internal crossover circuitry. Use only with appropriate Surround Sound processor / amplifier.

LFE OUTPUT JACK: This connector is connected internally to the LFE input jack and allows you to loop the LFE input signal out to another LFE input on an additional AR powered loudspeaker or subwoofer.

LINE IN JACKS: See Connection Option 2. These jacks are for input connection using audio cables. If you use this option, do not use Option 1.

LOW PASS FREQUENCY CONTROL: Adjusts the upper frequency limit for audio signals going to the subwoofer amplifier. This control helps you adjust the system's tonal balance.

LEVEL CONTROL: Balances the loudness of the Subwoofer relative to the Front speakers and compensates for room effects on the Subwoofer's output.

PHASE SWITCH: The Phase Switch controls the phase of the Subwoofer's output relative to the front speakers. Listen carefully to the sound quality while playing a CD with low bass. Select the position of the switch that produces the fullest deep bass without boominess. You may need to readjust the Volume and Crossover controls after setting the Phase Switch.

Connecting your Subwoofer

IMPORTANT: When you make connections, make sure that the power switches of all components, including the Subwoofer, are OFF.

Speaker wire: Typical speaker wire has a pair of separate conductors with insulating jackets that are molded together. We recommend that you use 16-gauge speaker wire for hooking your Receiver to your Front speakers. To make connections to the Subwoofer in parallel with the Front speakers easier, the speaker wire connecting the Receiver to the Subwoofer can be smaller (higher gauge number), since the Subwoofer does not draw large amounts of power through these wires.

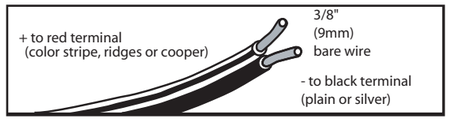

Polarity All speakers in a system must be connected with the same polarity. Speaker wire is marked for polarity so that you can identify which wire in the pair is which. Polarity is shown by a color stripe on the insulation, by ridges molded into the insulation, or by the colors of the wires – one copper and one silver. Strip the insulation from speaker wire ends to reveal the bare conductors before connecting to Receiver, Subwoofer or Speaker terminals.
IMPORTANT: Always connect the red (+) terminal on the Receiver to the red (+) terminal on the Subwoofer, and the black (-) terminal on the Receiver to the black (-) terminal on the Subwoofer. The same is true for hooking the Receiver outputs to the Front speakers: red (+)to red (+), and black (-) to black (-).
IMPORTANT: Use Option 1 or Option 2, not both.

OPTION 1. Connection with speaker wire

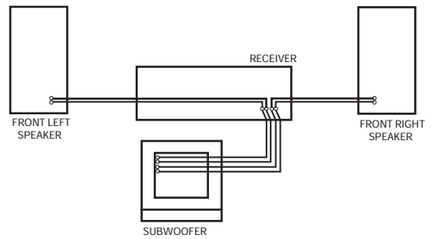

Connect speaker wires from the Receiver's front left and right speaker outputs to the Subwoofer's left and right Speaker In terminals, as well as the left and right front speakers.

OPTION 2. Connection with audio cable

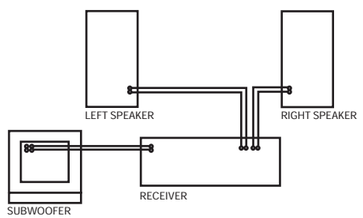

This connection uses a low level stereo sub signal. This is usually found on receivers equipped with Dolby® Digital decoding. Locate the subwoofer outputs on the back of your receiver. Using a standard RCA cable connect the subwoofer output on the back of your receiver to the Line-In on the back of the sub-woofer. If your receiver has a mono sub output , connect the RCA cable to the Left Input on your subwoofer.

Adjusting the Subwoofer controls

• Play a program on your system. Use a Dolby® Digital or Dolby® Pro-Logic signal, or a music CD. Adjust the Receiver's volume control for a comfortable sound level from the system speakers.
•Increase the Subwoofer's LEVEL Control setting clockwise, so that you hear the deep bass. Adjust the control for a natural, musical balance that has plenty of deep bass sound when it's actually present in the music.
Listen carefully to bass voices and, if needed, adjust the **LOW PASS FREQUENCY** Control so that they sound natural. Setting the frequency too high will make deep voices sound excessively "chesty" or resonant and will give the upper bass in music a "one-note" quality. Setting the frequency too low will make deep voices sound "thin" and will give the music a lack of "warmth."
The **PHASE SWITCH** controls the phase of the Subwoofer's output relative to the front speakers. Listen carefully to the sound quality while playing a CD with low bass. Select the position of the switch that produces the fullest deep bass without boominess. You may need to readjust the Volume and Crossover controls after setting the Phase Switch.
• Make fine adjustments until the program has satisfying and natural sound quality on both bass voices and music.

Troubleshooting

SUBWOOFER POWER INDICATOR LED DOES NOT LIGHT
• Check the AC outlet the Subwoofer is plugged into to be sure that it is live. You can use a tester or plug in a lamp to check it.
• If the AC outlet is live, either the power cord or Subwoofer has a problem. Unplug the power cord from the AC outlet and check the fuse by unscrewing the center piece from the holder. If it is blown, replace the fuse only with a fuse of the same type and rating. If this doesn't help, take the Subwoofer to your dealer for service
NO SOUND FROM THE FRONT SPEAKERS
• Be sure the Receiver and Subwoofer POWER switches are in the ON positions.
• Check the Receiver's Volume Control setting — if it is all the way down, there won't be any sound.
• Check that the Receiver's Input Selector is set to an active source of audio signals and that a Tape Monitor Loop is not engaged.
• Be sure that the Receiver's Speaker Selector switch is turned on to the terminals [A or B, 1 or 2] that you have your Front speakers connected to. If the Receiver has a headphone jack, you can use headphones to check the Receiver for output.
• Check the wires and connections from the Receiver's Front Speaker Output terminals to the Subwoofer's SPEAKER-IN terminals.
• Try removing the Subwoofer from the system, leaving your Front speakers connected to the Receiver. If there still is no sound, take the Receiver to your dealer for service.
NO SOUND FROM THE SUBWOOFER
• First, be sure there is sound from the Front speakers and that the Receiver is working correctly as outlined above.
•Check the Subwoofer's LEVEL control. If it is all the way counterclockwise, there may be no sound.
• The Subwoofer only reproduces deep bass sound. If the program has no deep bass, the Subwoofer will not make any sound. Play a program with plenty of bass, such as jazz or rock music, or an action movie.
• If everything else checks OK, take the Subwoofer to your dealer for service - **THERE ARE NO USER-SERVICEABLE PARTS INSIDE.**

Specifications - PL900 Subwoofer

Driver Complement and Enclosure
10" (25.4cm) Woofer in a tuned-port enclosure
Frequency Response: 23Hz-150Hz
Amplification Power output: 175 Watts RMS into 4 Ohms
Total Harmonic Distortion: 10% @ 175 Watts output
Crossover Frequency Variable: 50-150Hz
Special Features: Variable-Gain, Phase Switch
Finish: Black Ash with Silver Front Baffle
Dimensions (HxWxD):
17.75" x 10" x 18.5"
Weight: 35 lbs (10.9kg)

Limited Warranty

This warranty remains in effect for five years from date of purchase for speaker components, one year on subwoofer amplifiers and electronic components.

This warranty protects the original owner providing that the product has been purchased from an authorized AR dealer in the United States. The original bill of sale must be presented whenever warranty service is required. For warranty service outside the United States, contact the authorized AR distributor in the country where the product was purchased.
Except as specified below, this warranty covers all defects in material and workmanship.

THE FOLLOWING ARE NOT COVERED: Damaged caused by accident, misuse, abuse, product modification or neglect, damage occurring during shipment, damage from failure to follow instructions contained in the owners manual, damage resulting from the performance of repairs by someone not authorized by AR, or any claims based on misrepresentations by the seller. This warranty does not cover incidental or consequential damages. It does not cover the cost of removing or reinstalling the unit. This warranty is void if the serial number has been removed or defaced.

You are responsible for transporting your product for repair. However, AR will pay return freight charges if the repair is covered under warranty.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above may not apply to you.

How to Obtain Service

Please contact us at (800) 225-9847 or write to:
Acoustic Research (Attention: Customer Service Department)
AB Tech Services
17C Airport Drive
Hopedale, MA 01747

We will promptly advise you of what action to take. We may direct you to an authorized AR Service Center or ask you to send your speaker to the factory for repair. You will need to present the original bill of sale to establish the date of purchase. Please do not return the product to the above address, as it is not a service location. You are responsible for transporting your product for repair and for payment of any initial shipping charges. However, we will pay the return shipping charges if the repairs are covered under warranty.